



\* All outlets must be recessed into the shower base, to allow water to flow freely into the outlet and to avoid water ponding around outlet.

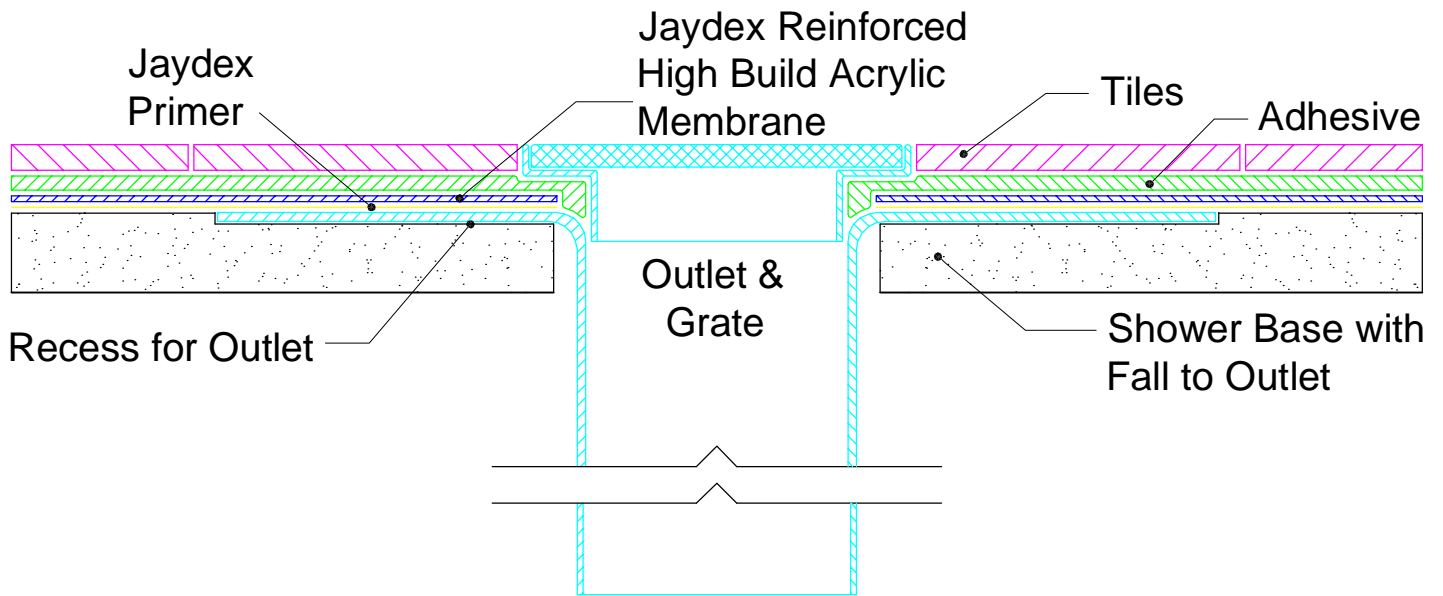

<b>SPECIALITY</b>	<b>SHOWER DRAIN OUTLE</b>
Advanced Bathroom High Build acrylic Membrane System	
Tile Overlay Finish	
SP/43/HA/TL	Date: 06/06 Drawn: SB

**JAYDEX**  
INTERNATIONAL · LIMITED

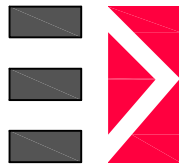

UNIT 3c-3 MARKEN PLACE,  
GLENFIELD, AUCKLAND

PHONE Bus. (09) 444-1751  
FAX (09) 444-0132

P.O Box 100 000  
NORTHSHORE MAIL CENTRE

E-MAIL jaydex@xtra.co.nz  
sales@jaydex.com

**Disclaimer**

The detailed drawings as outlined are based on our experience and application procedures and represent the latest information available. No responsibility is taken for uses to which this information may be put, but we advise that where the application is in complete conformity with the appropriate specification a warranty maybe available.

We reserve the right to alter or up date the information parameter at anytime without prior notice. \*Copyright